WARNINGS AND INSTRUCTIONS FOR LUMINAIRES

Page 1

IMPORTANT: FOR YOUR PROTECTION, YOU MUST CAREFULLY READ ALL WARNINGS AND INSTRUCTIONS IN THEIR ENTIRETY <u>PRIOR TO</u> INSTALLATION, OPERATION, SERVICE OR MAINTENANCE. FAILURE TO DO SO CAN RESULT IN DEATH, PERSONAL INJURY AND PROPERTY DAMAGE. If you do not understand these warnings and instructions, or if additional information is desired, please contact Signify at <u>SanMarcos.TSC@signify.com</u> phone 800-227-0758.

- Installation, service and maintenance of luminaires must be performed by a qualified professional and in accordance with all federal, state and local laws, regulations and electrical codes. This professional should be familiar with the construction and operation of this product and any hazards involved. If not qualified, do not attempt installation, service or maintenance.
- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts, abrasions and other hazards, please
 read all warnings and instructions included with the luminaire, on the luminaire's packaging and affixed to the luminaire itself.
- Maintenance of the luminaires should be performed by person(s) familiar with the luminaire's construction and operation and any hazards involved.



WARNING

RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY

- Disconnect or turn off power before attempting any installation, service or maintenance.
- Verify that supply voltage is correct by referencing the luminaire label information.
- Make all electrical and ground connections in accordance with the National Electrical Code (NEC) and any other applicable laws, regulations or codes.
- All wiring connections should be capped with UL-approved wire connectors.



WARNING

RISK OF FIRE OR PERSONAL INJURY

- Keep combustible materials away from LED/lamp & lens
- Do not operate in close proximity to persons, combustible materials or substances affected by heat or drying.



WARNING

RISK OF PERSONAL INJURY

- Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.
- Avoid direct eye exposure to the light source while it is on.



WARNING

RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY

- Allow Led/lamp & lens to cool before handling.
- Do not touch enclosure or light source
- Do not exceed maximum wattage marked on luminaire label.
- Follow all manufacturer's warnings, recommendations, instructions and restrictions for driver type, burning position, mounting locations and replacement.



CAUTION

RISK OF PRODUCT DAMAGE

- Never connect luminaires and/or components under load with supply voltage turned on.
- Do not mount or support these luminaires in a manner that can cut the outer jacket or damage wire insulation.
- Do not restrict fixture ventilation. Allow for some volume of airspace around luminaire. Avoid covering luminaire with insulation, foam or other material that will prevent convection or conduction cooling.
- Do not exceed luminaire maximum ambient temperature.
- Do not modify the luminaire.
- Only use luminaire in its intended application and location.
- Led products are polarity sensitive. Ensure proper polarity before installation.
- Electrostatic Discharge (ESD) can damage LED. Personal grounding equipment must be worn during all installation and servicing of the luminaire.
- Do not touch individual electrical components as this can cause ESD, shorten LED life, or impact LED performance.
- Some components inside the luminaire may not be serviceable. In the unlikely event your luminaire may require service, stop using it immediately and contact SanMarcos.TSC@signify.com phone 800-227-0758.
- · Always read the luminaires complete installation instructions prior to installation for any additional luminaire specific warnings.
- · In the case of HID or Fluorescent luminaires, regular re-lamping is required to keep luminaire operating within safe limits
- Do not install damaged product. Handling and installing damaged products can potentially increase the risks mentioned. In case of damage and/or missing parts upon arrival of the luminaire, please contact SanMarcos.TSC@signify.com phone 800-227-0758.
- These instructions do not purport to cover all details or variations in equipment nor to provide every possible contingency to meet in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's or owner's purposes, this matter should be referred to SanMarcos.TSC@signify.com phone 800-227-0758.
- Please see luminaire specific Installation and Maintenance Instruction for additional warnings or any applicable FCC or regulatory statements. Failure to follow any of these Instructions could void luminaires warranties.

Luminaire Maintenance

- Regular luminaire maintenance programs are recommended.
- It is recommended to clean the outside of the luminaire and the refractor/lens.
- · Frequency of cleaning will depend on ambient dirt level and minimum light output which is acceptable to user.
- If clean water is not sufficient for cleaning, use a neutral, synthetic, not-scratching and not-abrasive cleaning substance.
- Never use alkaline and/or acetous cleaning substances.
- Make sure that the cleaning substance is carefully removed by rinsing with lots of clean water.
- Signify recommends using a cleaning solution that has a PH between 5 and 8.
- Recycle: For information on how to recycle electronic products and components, please visit www.epa.gov.

INSTALLATION INSTRUCTIONS

BR841 LOUVERED BOLLARD

PN: A819901

Rev: B


CONSTANT WATTAGE AT FULL LIGHT OUTPUT

Page 2 of 2

IMPORTANT!


Be sure electrical power is off before installing luminaire.



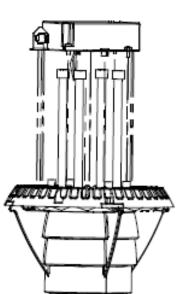

INSTALLATION PROCEDURE

- Install (4) 3/8" anchor bolts in concrete foundation utilizing template provided. Ensure bolts project 1 1/4" above concrete surface.
- Remove head assembly from shipping container.
- Place gasket on top of concrete foundation.
- Ensuring power to luminaire is off, connect supply leads to power supply primary leads and ground wire to ground wire assembly.
- Slip power supply assembly into concrete foundation and rest head assembly on concrete foundation.
- Loosen (3) 10-42 upper housing retaining screws two full turns with 1/8" ball driver. Rotate upper housing clockwise slightly and remove upper housing.
- To remove Driver first disconnect single input power cable and Output LED cables. Remove driver assembly from upper support casting by placing a flat head screwdriver in between upper louver and upper support casting.
- 8. Unscrew 1/4-20 & lock washers from the luminare head assembly. The louver head assembly can now be lifted. Palnuts (3qty) will keep assembly from seperating. Push down Palnuts if they work their way down from the screw. Be sure that the louver wires are not pinched in between heat sinks.
- Pull upwards to gain acess to shaft, make splice connections to power.
- 10. Secure mounting casting onto concrete foundation with
- (4) 3/8" lockwashers and locknuts.
- The louverhead assembly can now be reinstalled by screwing 1/4-20 & lock washers to the luminaire head assembly.
- Connect input wire harness by inserting male quick disconnect receptacle on driver into female quick disconnect.
 Connect LED output wires to quick disconnect wires with two female pin connector.
- Reinstall upper housing and tighten (3) 10-24 retaining screws.
- Luminaire installation is complete. Luminaire may be energized.

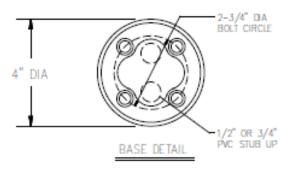

© 2018 Signify Holding. All rights reserved. This document contains information relating to the product portfolio of Signify which information may be subject to change. No representation or warranty as to the accuracy or completeness of the information included herein is given and any liability for any action in reliance thereon is disclaimed. The information presented in this document is not intended as any commercial offer and does not form part of any quotation or contract. All trademarks are owned by Signify Holding or their respective owners.

Signify North America Corporation 200 Franklin Square DriveSomerset N.J. 08873, LISA

Signify Canada Ltd./Signify Canada Ltée. 281 Hillmount Road, Markham, ON, Canada L6C 2S3



by (signify