

WWC removal and installation when using Optic Lenses

Step 1

Identify the optic metal brackets at the ends of the luminaire and remove the screws holding these brackets, as shown in figure 1.A.

Note: do not remove the metal bracket in the middle (pointed with an arrow)

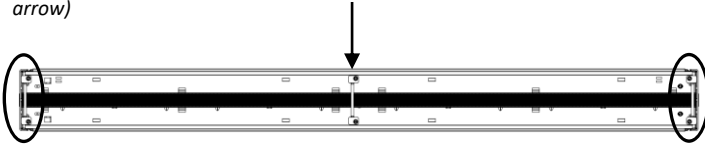


Figure 1. A

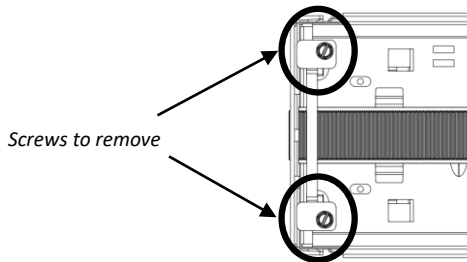


Figure 1. B

Step 2

Removed the WWC as shown in step 3 in surface mount version.

Step 3

Once the installation is finished install the WWC as shown in steps 8 and 9.

Step 4

Install the removed metal brackets in step 1 by placing them in position and screwing them.



Retrait et installation du WWC lors de l'utilisation de lentilles optiques

Étape 1

Identifiez les supports métalliques optiques aux extrémités du luminaire et retirez les vis retenant ces supports, tel qu'illustré à la figure 1.A.

Remarque : ne retirez pas le support métallique au milieu (pointé par une flèche)

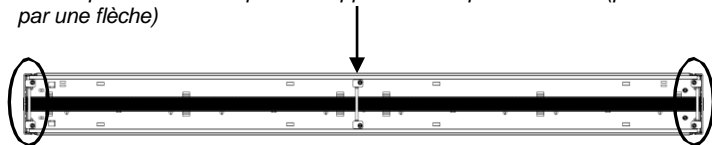


Figure 1. A

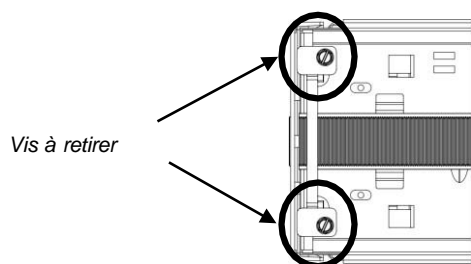


Figure 1. B

Étape 1

Retirez le WWC comme indiqué à l'étape 3 dans la version à montage en surface.

Étape 3

Une fois l'installation terminée, installez le WWC comme indiqué aux étapes 8 et 9.

Étape 4

Installez les supports métalliques retirés à l'étape 1 en les mettant en place et en les vissant.

